



LK SERIES TROUSER HANGERS INSTALLATIONS

Installation Dimensions(mm)


LW=Internal cabinet width
KB=Cabinet width

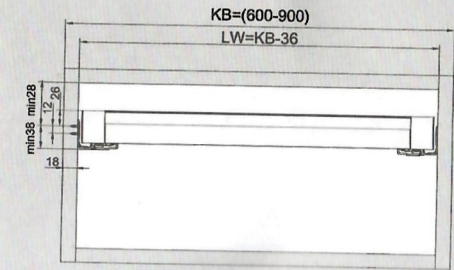

Screw Positions of the Slides (mm)


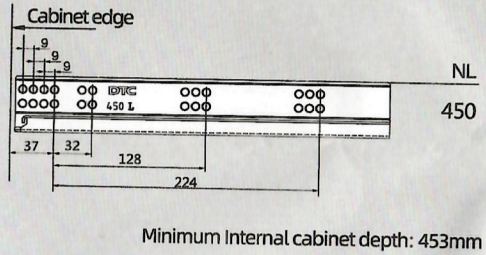


Drawer Assembly

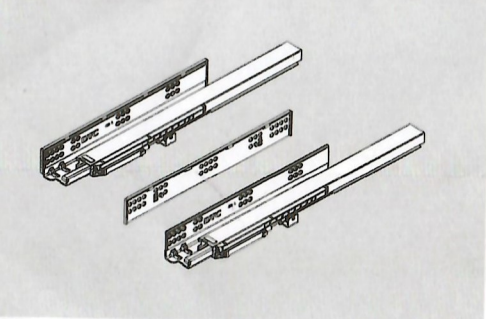


cabinet side B=16mm, no need to remove the spacer from the drawer slide.
cabinet side B=18mm, please remove the spacer from the drawer slide.

Drawer Assembly

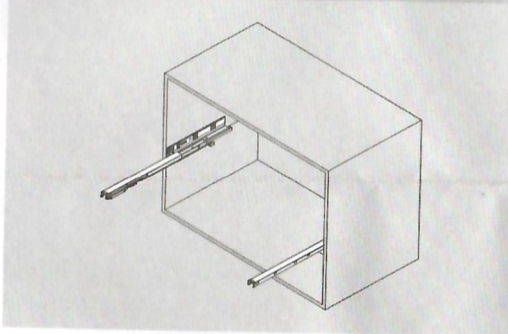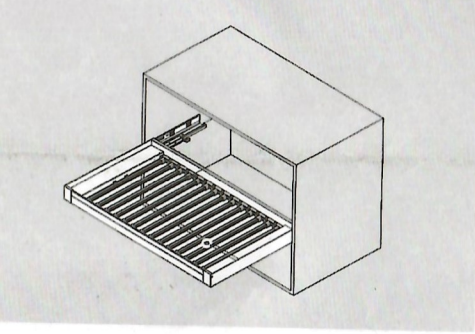

Slide into the cabinet

Removal of Inner Drawer

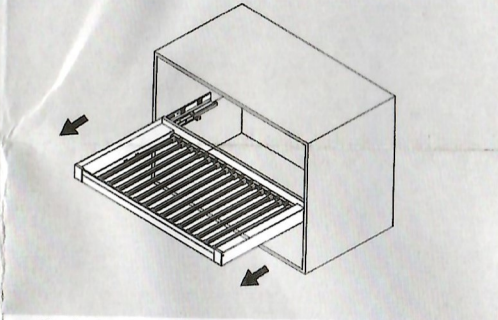

Press the locking device under drawer bottom and pull out the drawer

