



Cupboard door pneumatic underprop installation sketch map

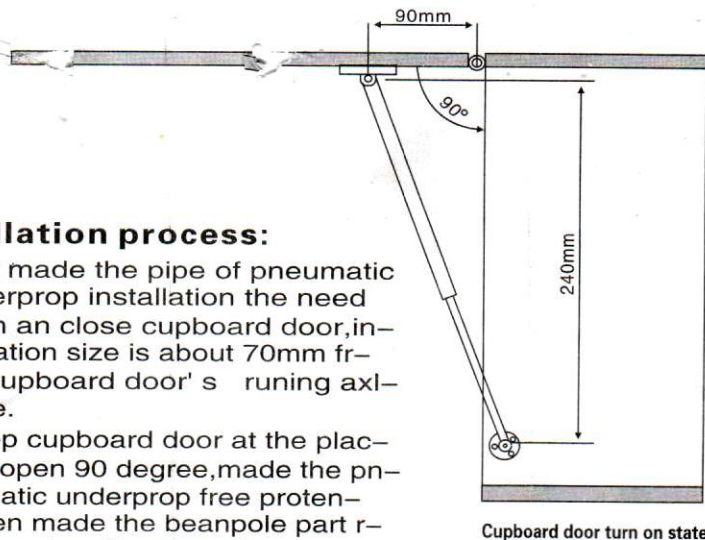

Installation process:

- 1、 first made the pipe of pneumatic underprop installation the need open an close cupboard door, installation size is about 70mm from cupboard door's running axle.
- 2、 Keep cupboard door at the place of open 90 degree, made the pneumatic underprop free protruded, then made the beanpole part rivet on rim of cupboard door.

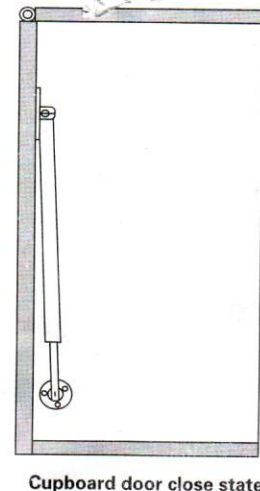

Announcements:

The pneumatic underprop's pipe part need upturned, the beanpole part need adown.

Wish made the cupboard door open and close power increase installation size can at 80-100mm.

Wish made the cupboard door open and close power allay, installation size can at 50-70mm.

Few sound cushion design

5 Year quality guarantee