



Instruction For Peacock Fully-out Magic Corner Basket

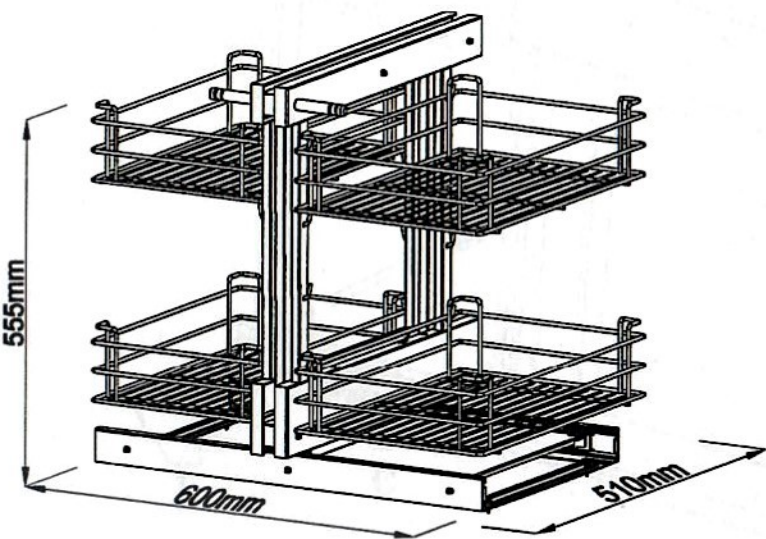


NO.	Description	Photo	Qty
A	Bottom frame		1 pcs
B	Body frame		1 pcs
C	Bottom cover		1 pcs
D	A basket		2 pcs
E	B basket		2 pcs
F	Handle		2 pcs
G	M4*8 screw		2 pcs
H	ST4*16 screw		6 pcs
I	M5*6 screw		14 pcs

① Drill 6 holes size 2.5mm on the bottom of the cabinet.

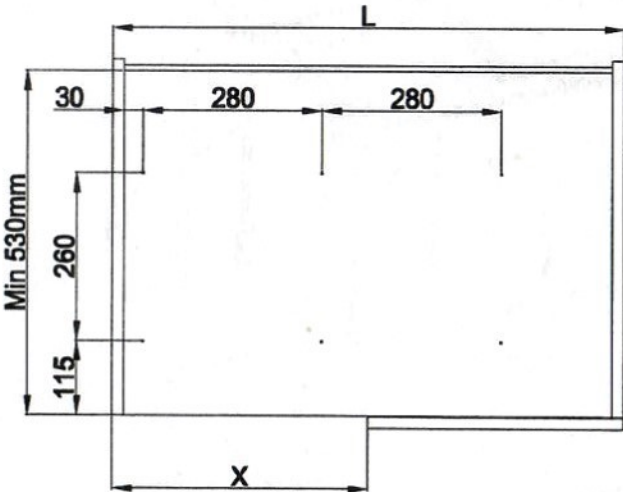



Left open's hole size

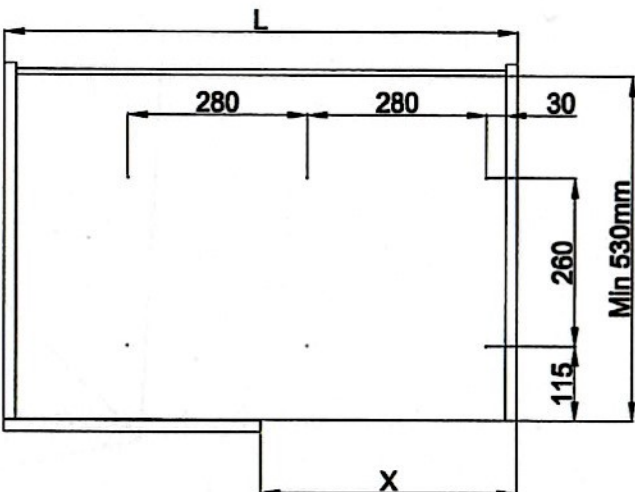


Right open's hole size

Cabinet	L(min)	X(min)
800mm	800	400
900mm	900	450

② Install the bottom cover on the bottom frame with 6 pcs of screws ite(I)

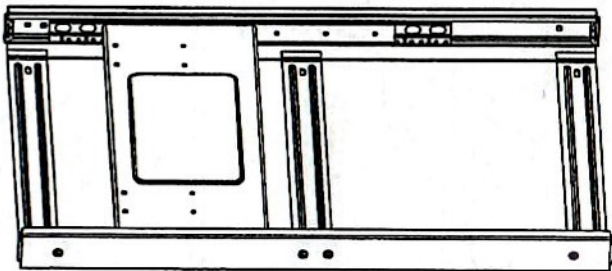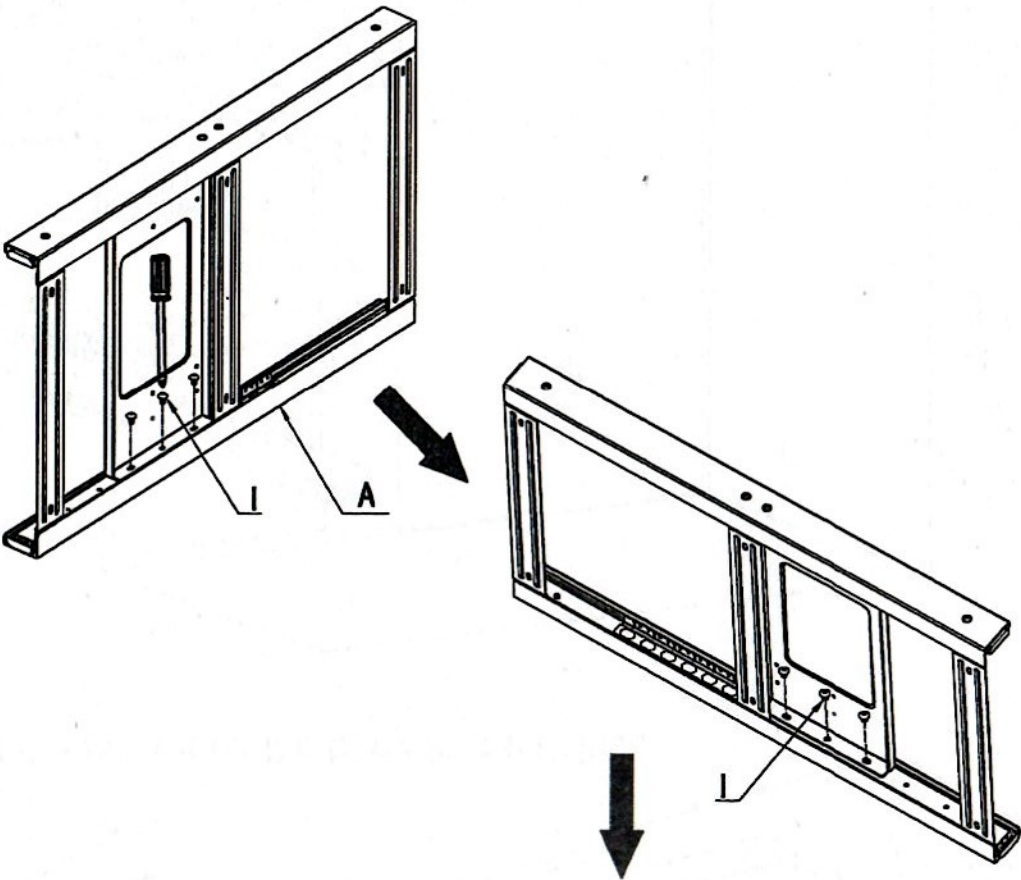


Left open

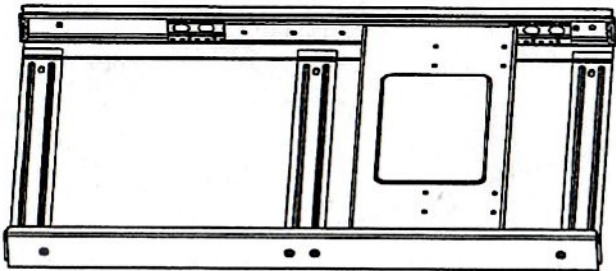


Right open

- ③ Install the bottom frame on the cabinet and fix it with 6 pcs of screw's item (H)


(Tips: it need to move the bottom cover left and right when you fix the screws).

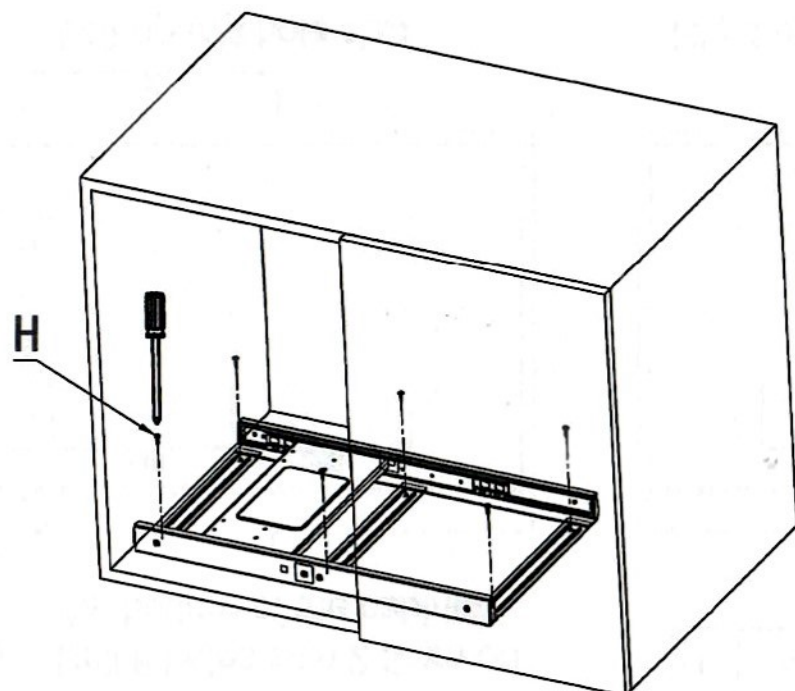

- ④ Pull out the slide and install the handles on the body frames.

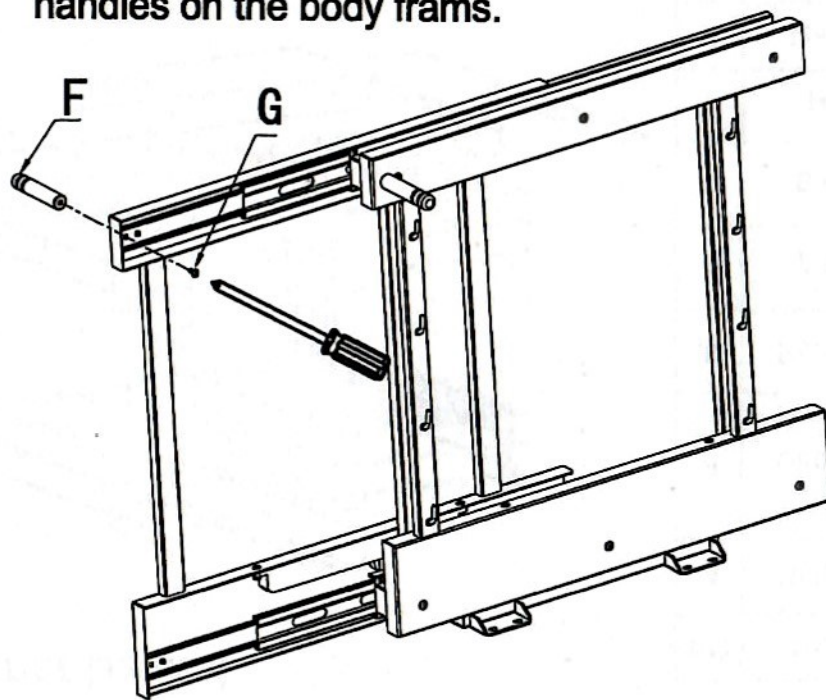

- ⑤ Put the body frame on the bottom frame and fix it with 8pcs (I).

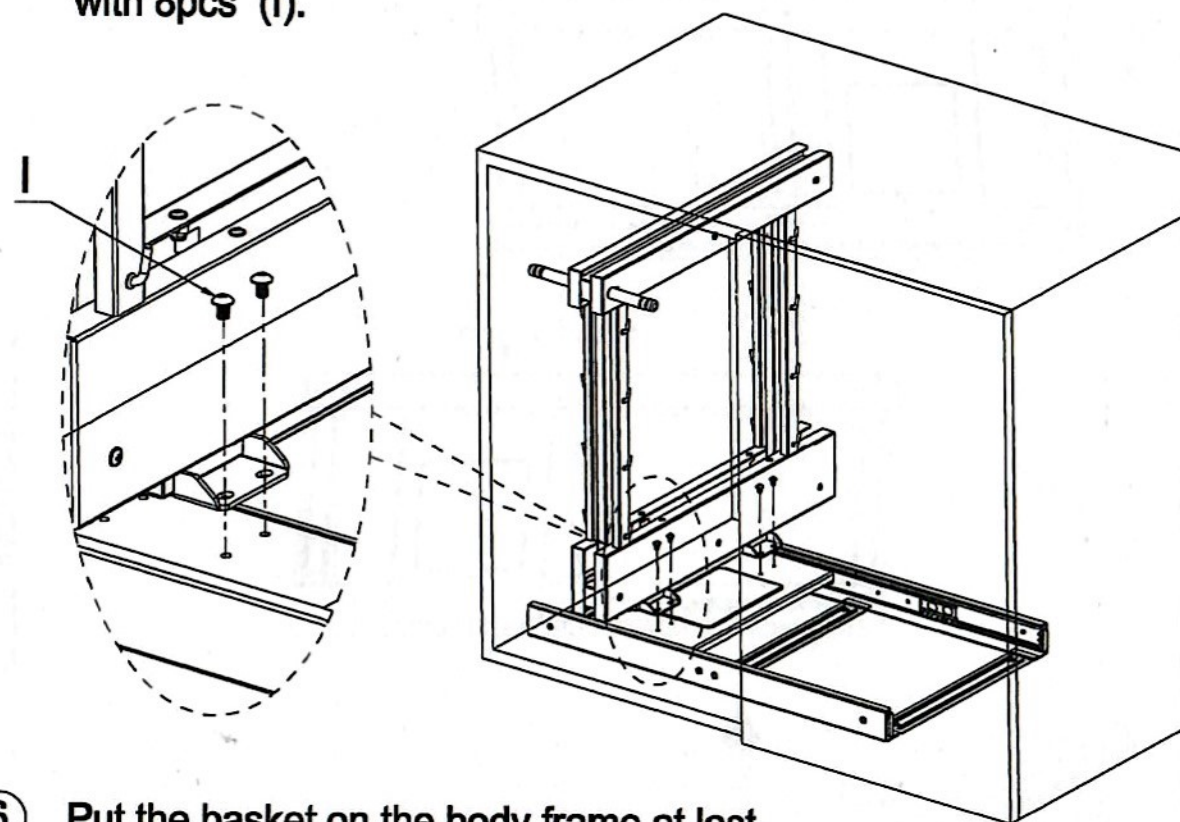

- ⑥ Put the basket on the body frame at last.

